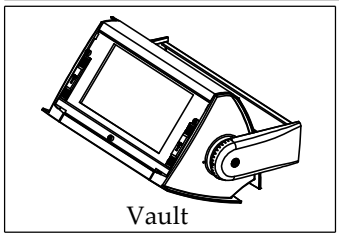
Vault

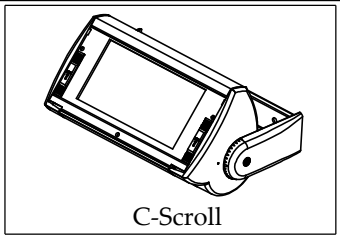
C-Scroll

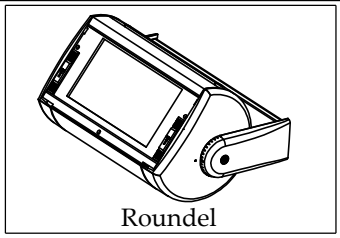
Roundel

These installation instructions are valid with the above Ametrix styles.

Small, OUTDOOR YR

(Yoke mount, **R**emote ballast**)**

Visor and Non-Visor

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. **Do not** mount fixtures vertically.

Exploded view and part call-out

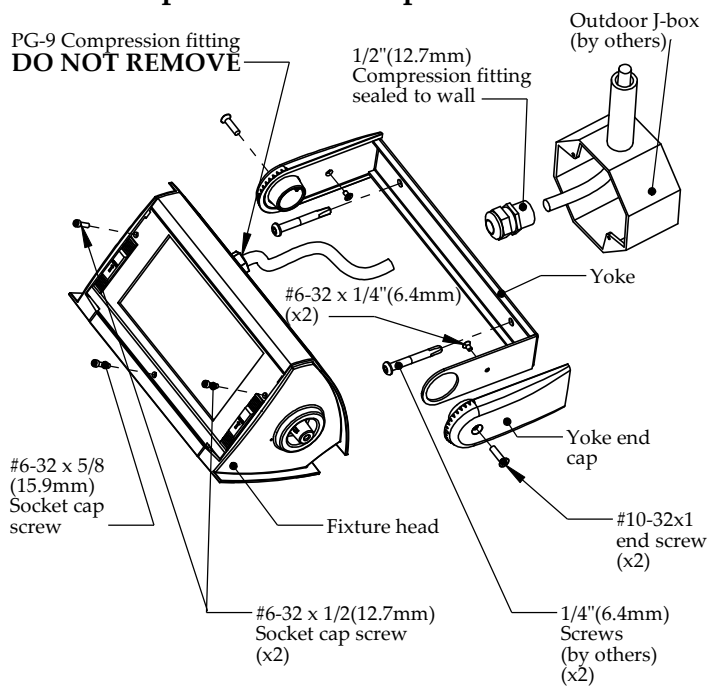
PG-9 Compression fitting
DO NOT REMOVE
1/2"(12.7mm) Compression fitting sealed to wall
Outdoor J-box (by others)
Yoke
#6-32 x 1/4"(6.4mm) (x2)
Yoke end cap
#6-32 x 5/8 (15.9mm) Socket cap screw
Fixture head
#10-32x1 end screw (x2)
#6-32 x 1/2(12.7mm) Socket cap screw (x2)
1/4"(6.4mm) Screws (by others) (x2)

1 Mounting yoke to outdoor surface

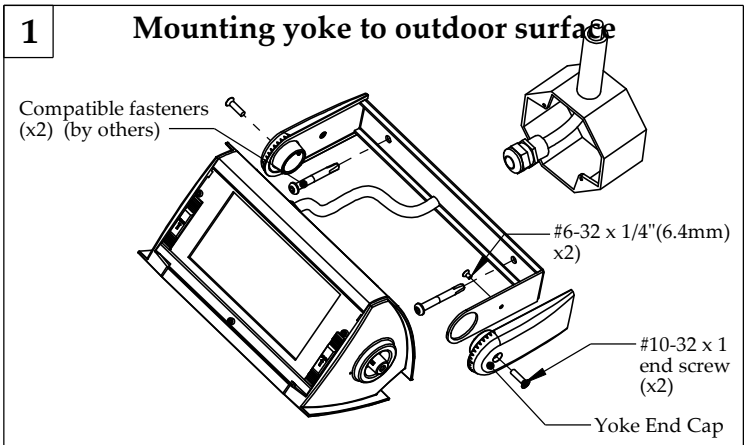

1. To secure yoke, fixture head must be removed. First, remove both #10-32 x1 end screws.
2. Remove **one** #6-32 x.25 screw to remove yoke end cap and free fixture head. Place both fixture head and yoke end cap in a safe place.
3. With fixture head and yoke end cap safely stored, secure yoke to outdoor surface using the correct fasteners (by others).
4. Re-install fixture head by first replacing head with #10-32 x 1 End screw and then securing the yoke end cap using the #6-32 x.25 screws.

2 Sealing the outdoor fixture

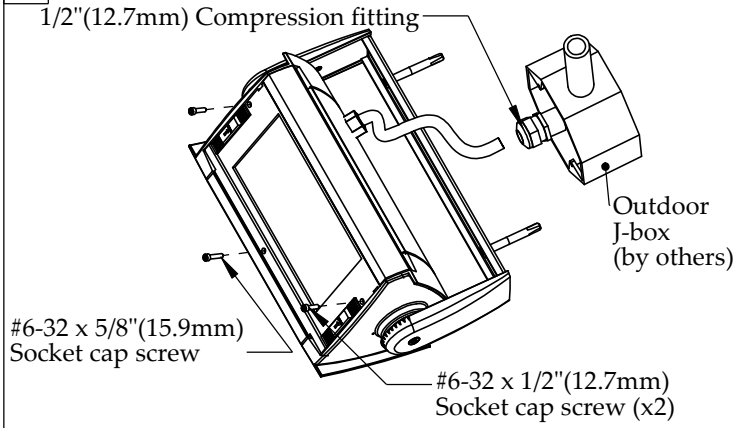

1. After installing lamp, fixture head must be sealed by securing all screws and latches on door face. Holes above latches receive the #6-32 x.5 socket cap screws. The center hole receives the longer #6-32 x .625 socket cap screw.
2. Slide 1/2" compression fitting down fixture head wire and splice with power feed wire, ensuring all connections are properly matched. Seal 1/2" compression fitting to outdoor surface and ensure a watertight seal.

3 Aiming the fixture

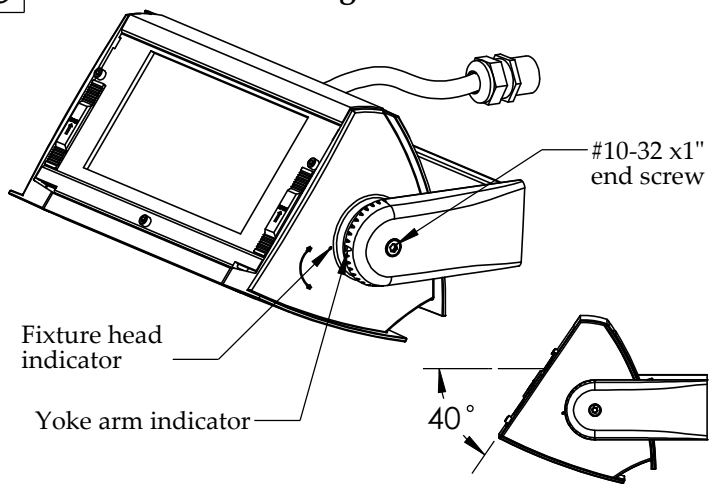

1. To aim fixture, loosen both #10-32 x1 end screws. When the PointGrab™ system indicators are lined up, the slope of the lens face is 40-degrees. Each subsequent notch is an additional 10-degrees.
2. When the fixture head is adjusted to the desired angle, re-tighten end screws to secure the position.

Ametrix
4675 Holly Street
Denver, CO 80216
P: 303-393-1522
www.ametrixlighting.com

Cooper Lighting
1121 Highway 74 South
Peachtree City, GA 30269
P: 770-486-4800
www.cooperlighting.com

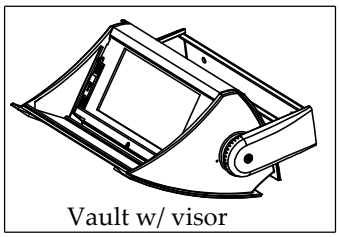
Vault w/ visor

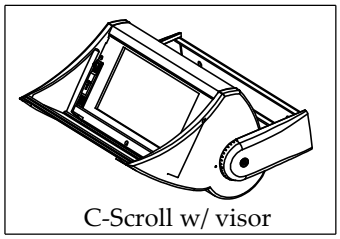
C-Scroll w/ visor

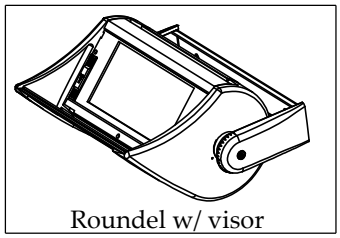
Roundel w/ visor

These installation instructions are valid with the above Ametrix styles

Small, OUTDOOR YR

(Yoke mount, Remote ballast)

Visor and Non-Visor

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. **Do not** mount fixtures vertically.

Mounting Plate Dimensions (In and mm)

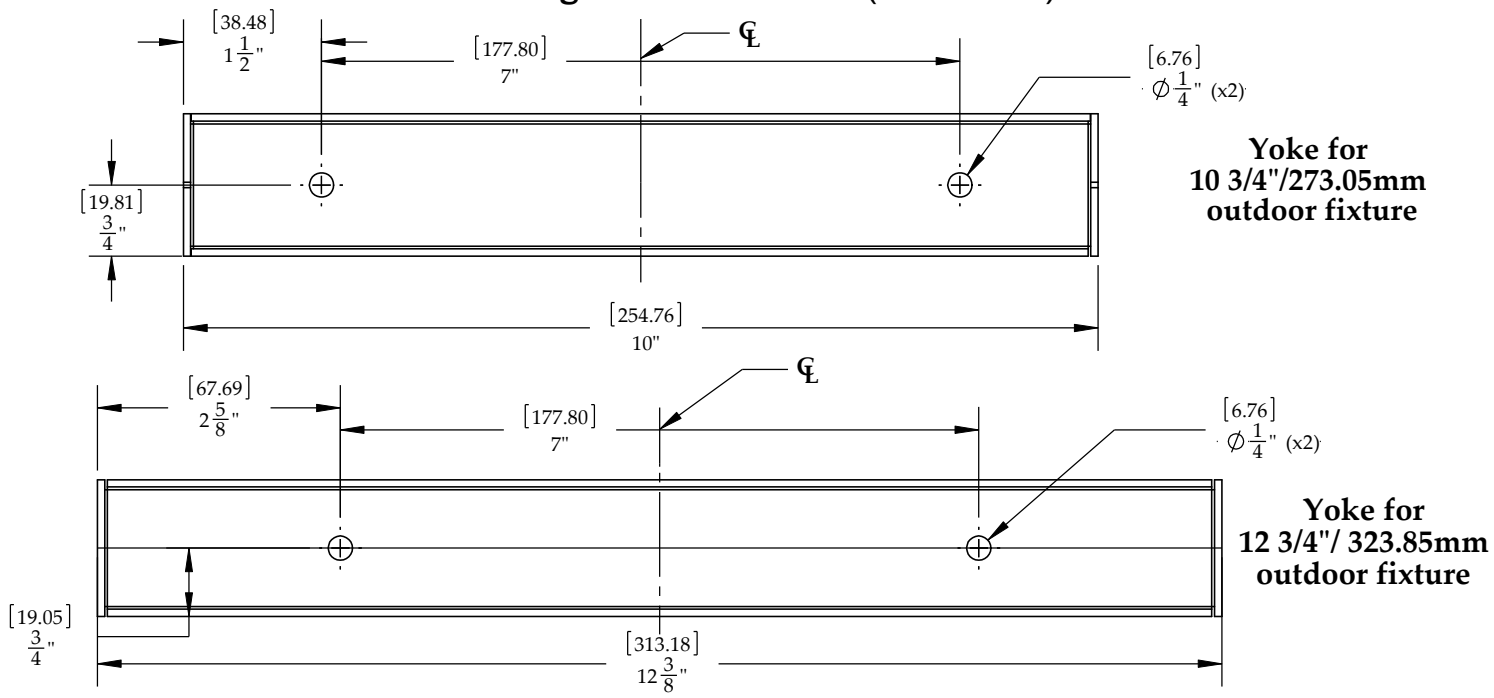

Yoke for 10 3/4"/273.05mm outdoor fixture

Yoke for 12 3/4"/ 323.85mm outdoor fixture

Lamping Size Chart

(lamps provided by others)

FIXTURE SIZE (inches/ mm)	WATTAGE	# OF LAMPS	LAMP TYPE	LAMP DESCRIPTION	LAMP (not to scale)
10 3/4 / 273.05	39 W	1	T6	Ceramic Metal Halide	
12 3/4 / 323.85	70 W	1	T6	Ceramic Metal Halide	
12 3/4 / 323.85	150 W	1	T6	Ceramic Metal Halide	
12 3/4 / 323.85	26 W	1	4-Pin Triple Tube	Compact Fluorescent	 Use only GE or Sylvania CFL Lamps
12 3/4 / 323.85	32 W	1	4-Pin Triple Tube	Compact Fluorescent	
12 3/4 / 323.85	42 W	1	4-Pin Triple Tube	Compact Fluorescent	
10 3/4 / 273.05	100 W	1	T4	Halogen (Single Ended)	
12 3/4 / 323.85	150 W	1	T4	Halogen (Single Ended)	
12 3/4 / 323.85	250 W	1	T4	Halogen (Single Ended)	

Ametrix
4675 Holly Street
Denver, CO 80216
P: 303-393-1522
www.ametrixlighting.com

Cooper Lighting
1121 Highway 74 South
Peachtree City, GA 30269
P: 770-486-4800
www.cooperlighting.com